

Parts List

- 1 25 foot 1 inch wide steel tape measure
- 1 10 foot piece of 3/4 inch Schedule 40 PVC Tube
- 2 3/4 inch PVC Cross connectors
- 2 3/4 inch PVC T connector
- 6 3/4 to 1 1/2 inch stainless Hose Clamps
- 1 5 inch piece of 14 ga wire
- 1 length of RG-58 cable, approx 6 foot
- Solder and Flux
- Electrical Tape

Tools

- Soldering Iron
- Tin Snips
- Wire Cutter
- Screw driver or nut driver
- PVC cutter or fine tooth saw
- Sand paper or Dremel tool with sanding disk
- Ruler or tape measure

Step 1

Cut three pieces of PVC tubing. One piece will be 11 1/4 inches long and the second will be 6 7/8 inches long. These pieces will make up the support boom for the antenna. The third piece can be any length, it will be the handle for the antenna, so give yourself about a foot or foot and a half. Whatever is comfortable.

Fit the pieces of PVC tube together with the crosses and the T. You may PVC cement if you wish to make the connections permanent, otherwise dry fitting them will be fine. The distance between the first cross and the middle cross has to be 8 inches and the distance between the middle cross and the T has to be 12 1/2 inches. These are measured from the center points of the connectors. Make adjustment if necessary.



Step 2

Cut the tape measure into four pieces. One piece will be $41 \frac{3}{8}$ inch and the second will be $35 \frac{1}{8}$ inch. These are the reflector and director elements for your yagi. The driven element is made up of two pieces, so cut two pieces that are $17 \frac{3}{4}$ inches long.

Step 3


On the two driven element pieces, sand or grind away the paint from one corner. This is where we will solder the the coax and the hairpin match. Apply flux and use your soldering iron to tin this area. It's easier to tin this area now before attaching the elements to the support boom.

Step 4

Assemble the director and reflector elements. Making sure they are centered, use the hose clamps to attach the elements to the T and Cross connectors.

Step 5

Assemble the driven elements. Using the hose clamps, attach each half of the driven elements to the Cross connector. There should be a one inch gap between the two pieces.

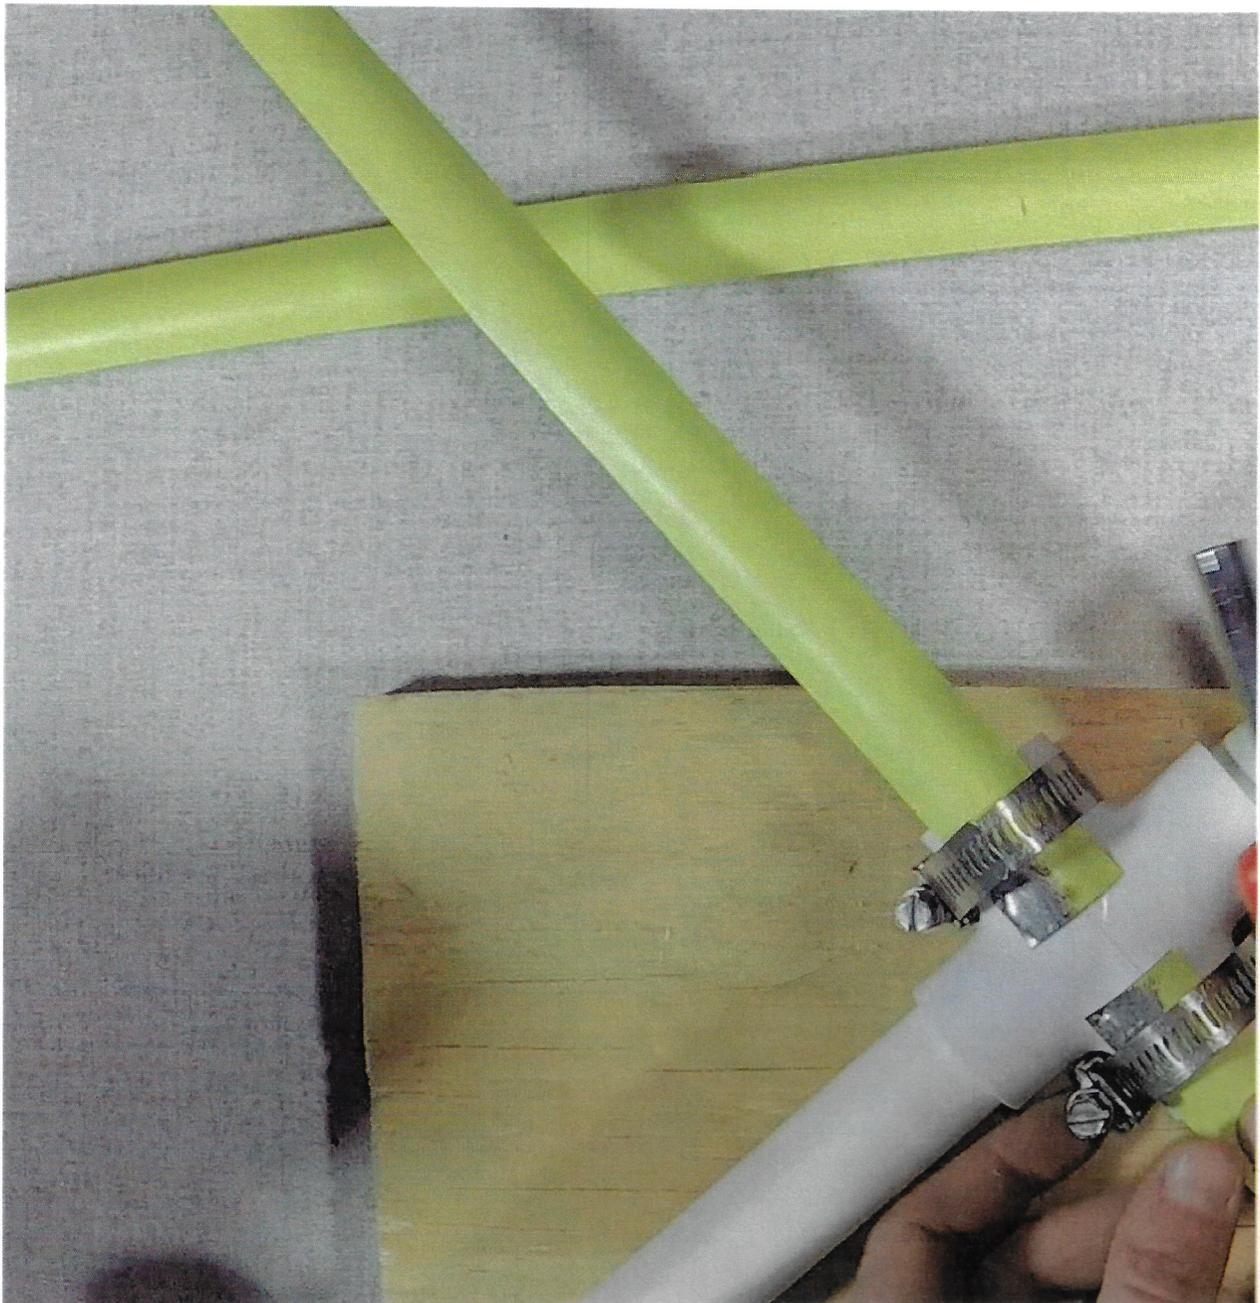

Step 6

Attach the hairpin match. Take your 5 inch piece of wire and strip 1/4 inch off each end. Bend the wire so it is in a U shape with a 3/4 inch gap. Solder this to the tinned ends of the driven element.

Step 7

Attach the coax. I've got a six foot length prepared piece of RG-58 coax where I put a BNC connector on one end and stripped the braid and center conductor on the other. You'll solder these two ends to the driven element of the antenna. It doesn't make a difference which end goes where. Now before you solder, you can drill a hole in your boom and thread the coax inside the pipe. Otherwise just use a couple of cable ties or electrical tape to secure the coax to the antenna.